


DECK MOUNT TUB FILLER ROUGH-IN VALVE Model # 10124, 10124A

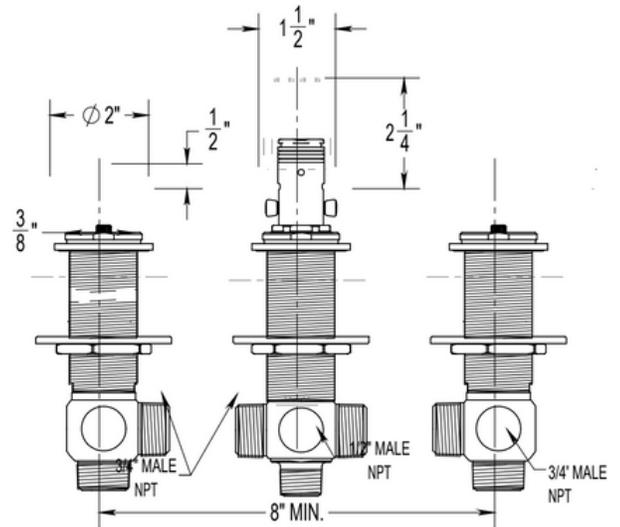

BEFORE YOU BEGIN YOUR INSTALLATION:



Turn off water supply.



Observe all local plumbing codes.



Inspect plumbing for signs of damage. Replace as necessary.



DO NOT use petroleum based products on this faucet.

REQUIRED TOOLS AND MATERIALS:



Phillips Screwdriver



1 /4" Hex Key Wrench



Adjustable Wrench




Drill

WARNING: Cancer and reproductive harm -see www.P65Warnings.ca.gov

IMPORTANT


- Read these instructions and plan the installation before beginning.
- Risk of product damage. Do not apply direct heat to the valve. Excessive heat will damage the plastic components and plaster guard. •A mixed water supply is required for this product.
- Component location, spacing, and situational requirements can vary.

1

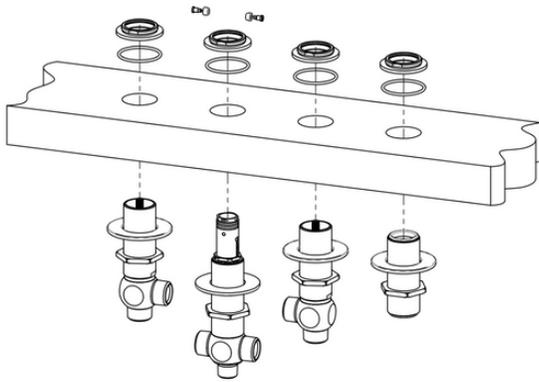


Disassemble top nut and o'ring seal from the top of the valves and cradle mount.

2

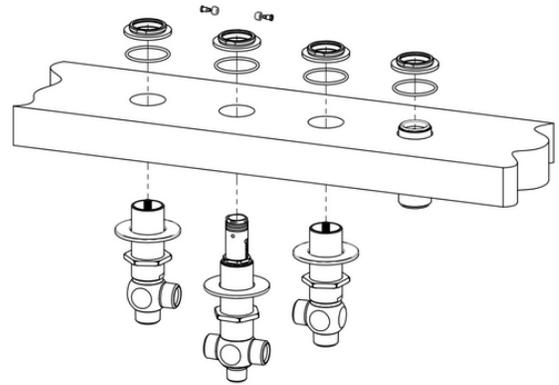


Place the hand shower cradle mount through the deck from underneath.

3

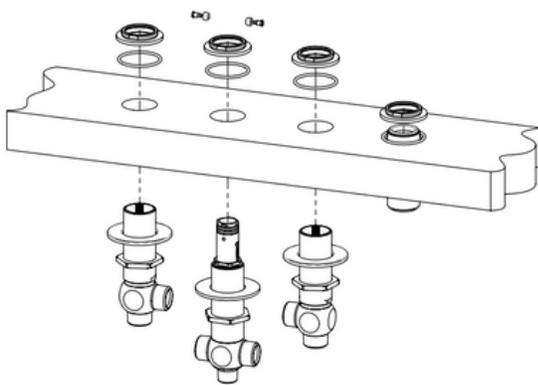


Tighten the top nut, with the o'ring seal in place, to the top of the handshower cradle until the top nut is flush to the top nut.

4

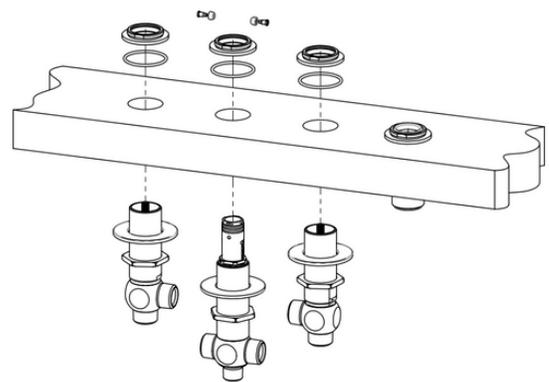


Secure in place from the bottom mounting nut.

5

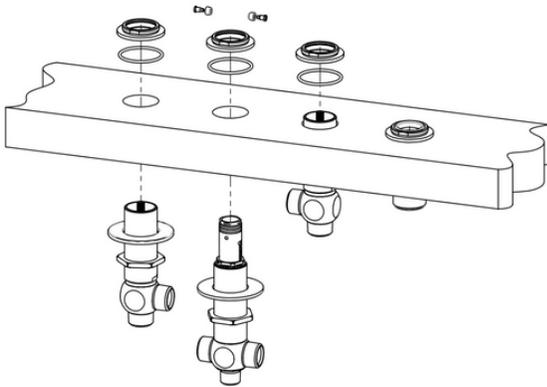


Place the cold (blue) valve through deck from underneath.

6

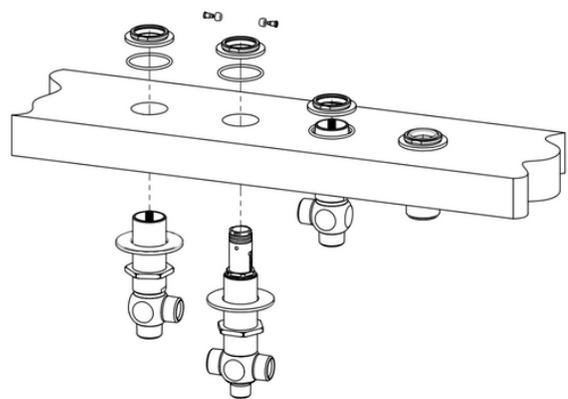


Tighten the top nut, with the o'ring seal in place, to the top of the cold valve until the top nut is bottomed out to the top of the valve.

7

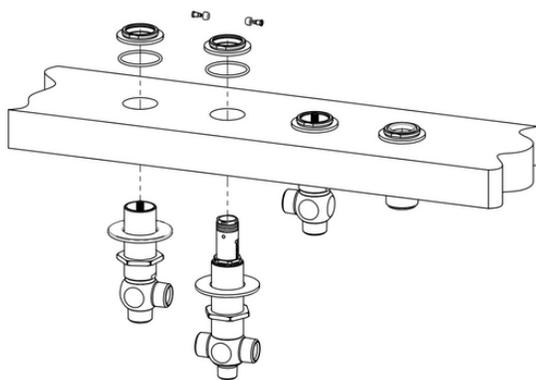


Secure in place from the bottom mounting nut.

8

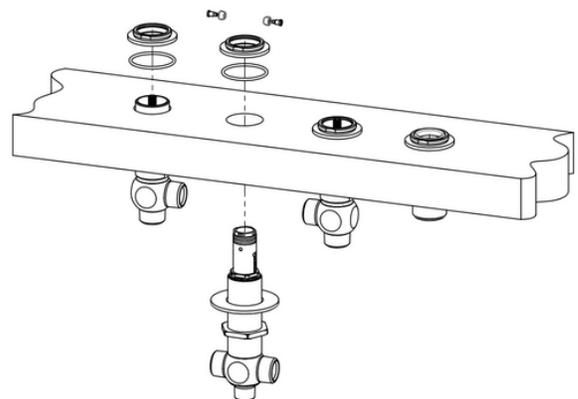


Place the hot (red) valve through the deck from underneath.

9

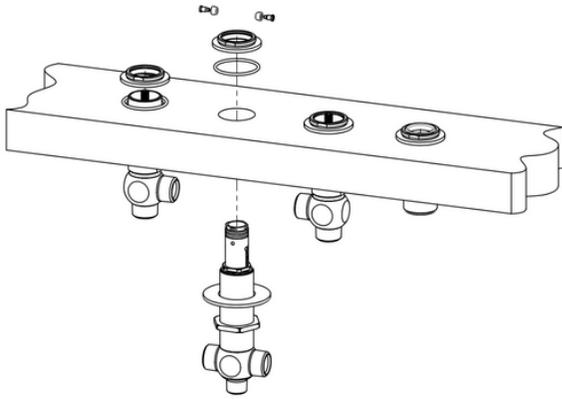


Tighten the top nut, with the o'ring seal in place, to the top of the hot valve until the top nut is bottomed out to the top of the valve.

10

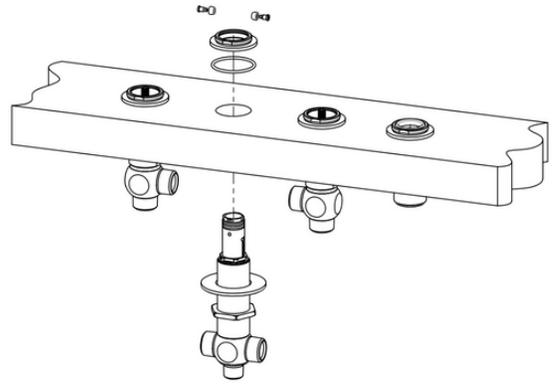


Secure in place from the bottom mounting nut.

11

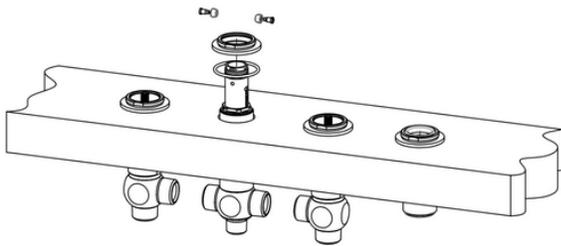


Place the diverter valve through the deck from underneath. Ensure one of the divot holes is facing toward the direction of the tub.

12

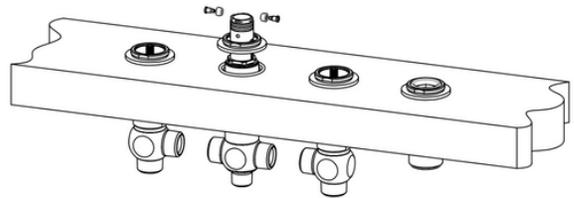


Tighten the top nut, with the o'ring seal in place, to the top of the diverter valve until the top nut is flush to the top of the valve.

13

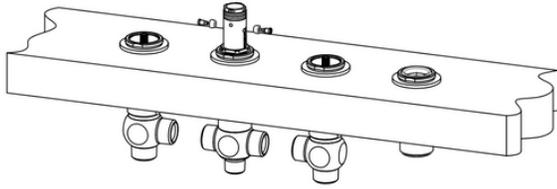

Secure in place from the bottom mounting nut.


14

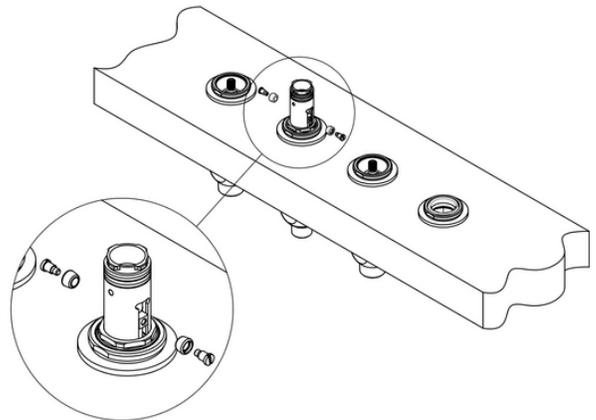

DETAIL A
SCALE 1:2

Fasten the roller and roller screw into place on both sides of the diverter valve.


15

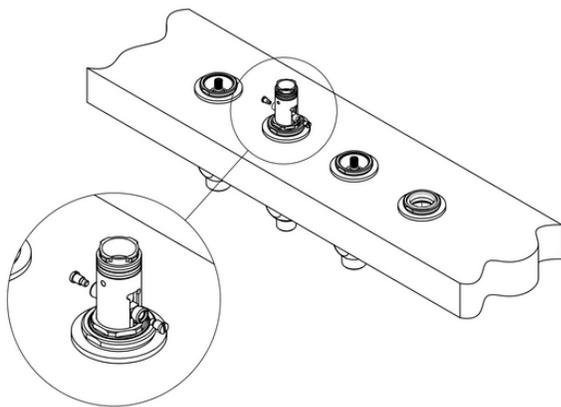

DETAIL A
SCALE 1:2

Tighten down the screw with a flat head screwdriver.

16

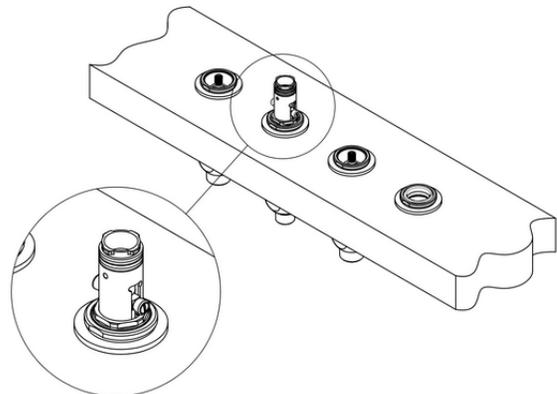


DETAIL A
SCALE 1:2

Attach hot/cold valve to diverter valve, utilizing $\frac{3}{4}$ " connections.


For 10124A

1

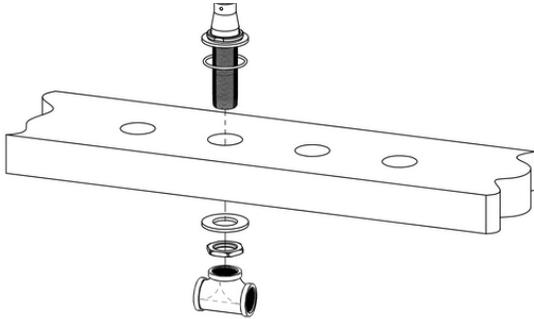


Place the spout anchor mount through the deck from the top of the deck.

2

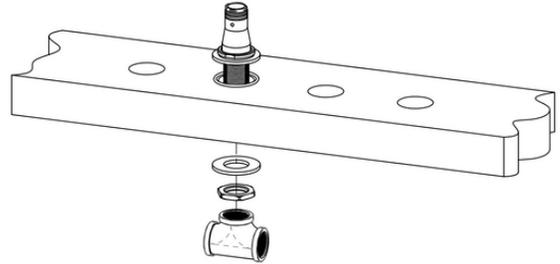


Secure the washer and mounting nut from underneath the deck.

3

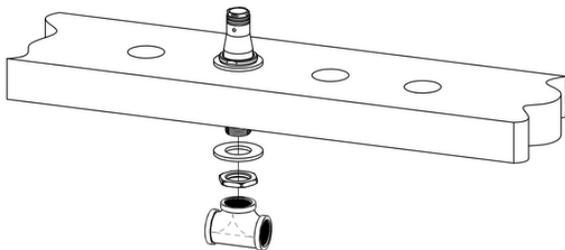

Apply plumbers' tape onto the bottom shank of the spout anchor. Secure the supplied tee connection to the bottom mount shank.

4

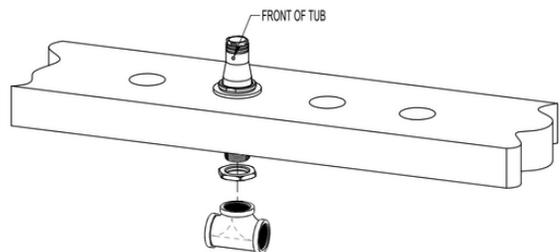

Ensure one of the divot holes is facing toward the direction of the tub.



1-888-304-0660 • 951-304-0520

www.waterstoneco.com